

BEFCO[®]


Operator's Manual

GROUND ENGAGE EQUIPMENT

Grading Scrapers

BGS-C48

BGS-060, BGS-072, BGS-084

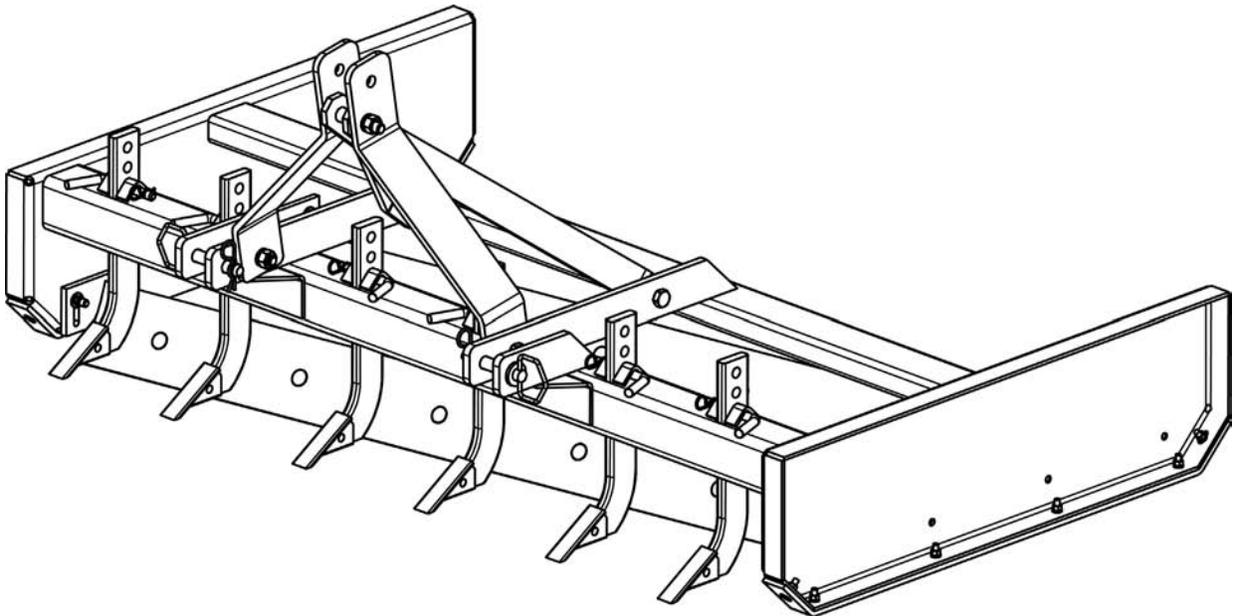

The operator's manual is a technical service guide and must always accompany the machine.

Manual 971-398B

October 2017

SAFETY

Take note! This safety alert symbol found throughout this manual is used to call your attention to instructions involving your personal safety and the safety of others. Failure to follow these instructions can result in injury or death.



*This symbol means:
ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!*

Signal Words

Note the use of the signal words DANGER, WARNING and CAUTION with the safety messages. The appropriate signal words for each have been selected using the following guidelines:



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury.



WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury.

INDEX

1 - GENERAL INFORMATION	4
1.01 - General	4
1.02 - Warranty Information	4
1.03 - Model and Serial Number ID	5
2 - SAFETY PRECAUTIONS	6
2.01 - Preparation	6
2.02 - Starting and Stopping	7
2.03 - Messages and Signs	7
3 - OPERATION	9
3.01 - Operational Safety	9
3.02 - Setup	11
3.03 - Assembly Instructions	11
3.04 - Pre-Operational Check	12
3.05 - Attaching to the Tractor	12
3.06 - Start Up	13
3.07 - Working Speed	14
3.08 - Operating Techniques	14
3.09 - Uneven Terrain	16
3.10 - Transport	16
4 - MAINTENANCE	17
4.01 - Maintenance Safety	17
4.02 - Service	18
5 - REPAIR PROCEDURES	20
5.01 - Shanks and Shank Tips Replacement	20
5.02 - Scraper Blade Replacement	21
5.03 - Skid Shoe Replacement	21
5.04 - Suggested Spare Parts	22
5.05 - Storage	22
6 - TROUBLESHOOTING	23
7 - PRE-DELIVERY CHECKLIST	24
8 - WARRANTY	25
PARTS MANUAL	29

1 - GENERAL INFORMATION

Thank you and congratulations for having chosen our implement. Your new grading scraper is a technologically advanced machine constructed of high quality, sturdy components that will fulfill your working expectations. Read this manual carefully. It will instruct you on how to operate and service your implement safely and correctly. Failure to do so could result in personal injury and/or in equipment damage.

1.01 - General



CAUTION: Right hand and left hand sides of the implement are determined by facing in the direction the implement will travel when going forward (see fig. 2).

1.02 - Warranty Information

Carefully read the Warranty section¹, detailing coverage and limitations of this warranty. **Warranty** is provided for customers who operate and maintain their equipment as described in this manual. Warranty registration is accomplished by the dealer by completing and forwarding the **Warranty Registration** form to the Company, along with a copy of the dealer's invoice. It is in your best interest to insure that this has been done.

Warranty does not cover the following:

1. Cleaning, transporting, mailing and service call charges.
2. Normal wear items such as shanks, grading blades, skid shoes, etc.
3. Depreciation or damage caused by normal wear, accidents, improper maintenance, improper protection or improper use.
4. The use of non-original spare parts and accessories.

Your Authorized Company Dealer has genuine parts in stock. Only these approved replacement parts should be used.

This limited warranty covers defective material and workmanship. The cost of normal maintenance or repairs for accidents or improper use and related labor will be borne by the owner.

¹ See Chapter 8 - Warranty.

1.03 - Model and Serial Number ID

Attached to the frame is an ID plate showing the model and the serial number. Record your implement model and serial number in the space provided. Your dealer needs this information to give you prompt, efficient service when you order parts.

BEFCO	1781 S. Wesleyan Blvd. — P.O. Box 6036 Rocky Mount, N.C. 27802 — U.S.A. Tel: 1.252.977.9920 Fax: 1.252.977.9718
MODEL:	
SERIAL:	
VERSION:	

2 - SAFETY PRECAUTIONS

Safety is the primary concern in the design and manufacture of our products. Unfortunately our efforts to provide safe equipment can be wiped out by a single careless act of an operator.

In addition to the design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment. It is the operator's responsibility to read and understand all safety and operating instructions in the manual and to follow these.

Allow only properly trained personnel to operate the implement. Working with unfamiliar equipment can lead to careless injuries. Read this manual, and the manual for your tractor, before assembly or operation, to acquaint yourself with the machines. It is the owner's responsibility, if this machine is used by any person other than yourself, is loaned or rented, to make certain that the operator, prior to operating, reads and understands the operator's manuals and is instructed in safe and proper use.

2.01 - Preparation



1. Before operating equipment read and understand the operator's manual and the safety signs (**see fig. 2**).
2. Thoroughly inspect the implement before initial operation to assure that all packaging materials, i.e. wires, bands, and tape have been removed.
3. Personal protection equipment including hard hat, safety glasses, safety shoes, and gloves are recommended during assembly, installation, operation, adjustment, maintaining and/or repairing the implement.
4. Operate the implement only with a tractor equipped with an approved Roll-Over-Protective-System (ROPS). Always wear your seat belt. Serious injury or even death could result from falling off the tractor.
5. Clear area to be cut of stones, branches or other debris that might be thrown, causing injury or damage.
6. Before beginning operation, contact local utility companies to make certain there are no bundled gas lines, electrical cables, etc., in the work area.
7. Operate only in daylight or good artificial light.
8. Ensure implement is properly mounted, adjusted and in good operating condition.
9. Ensure that all safety decals are properly installed and in good condition.

2.02 - Starting and Stopping



1. Be sure that no one is near the machine prior to engaging or while the machine is working.
2. Be sure the tractor is in "Neutral" before starting engine.
3. Equipment operating power is ground driven. Know how to stop the tractor quickly in case of an emergency.
4. After striking an obstacle, shut the tractor off, remove key and thoroughly inspect for damage before restarting.


2.03 - Messages and Signs



1. Read and adhere to all safety and operating decals on this machine (**see fig. 2**).
2. Before dismounting tractor: Allow moving parts to stop, stop engine, set brake and remove the key of unattended equipment.
3. Keep safety decals in place and in good condition.
4. Do not use with bystanders in area.
5. Allow no riders on tractor or implement.
6. Allow moving parts to stop before repair.
7. Securely support implement before working underneath.

Additional warning and operating decals are available at no extra charge. Please specify model and serial number when ordering.

Fig. 2 - Safety decals; replace immediately if damaged.

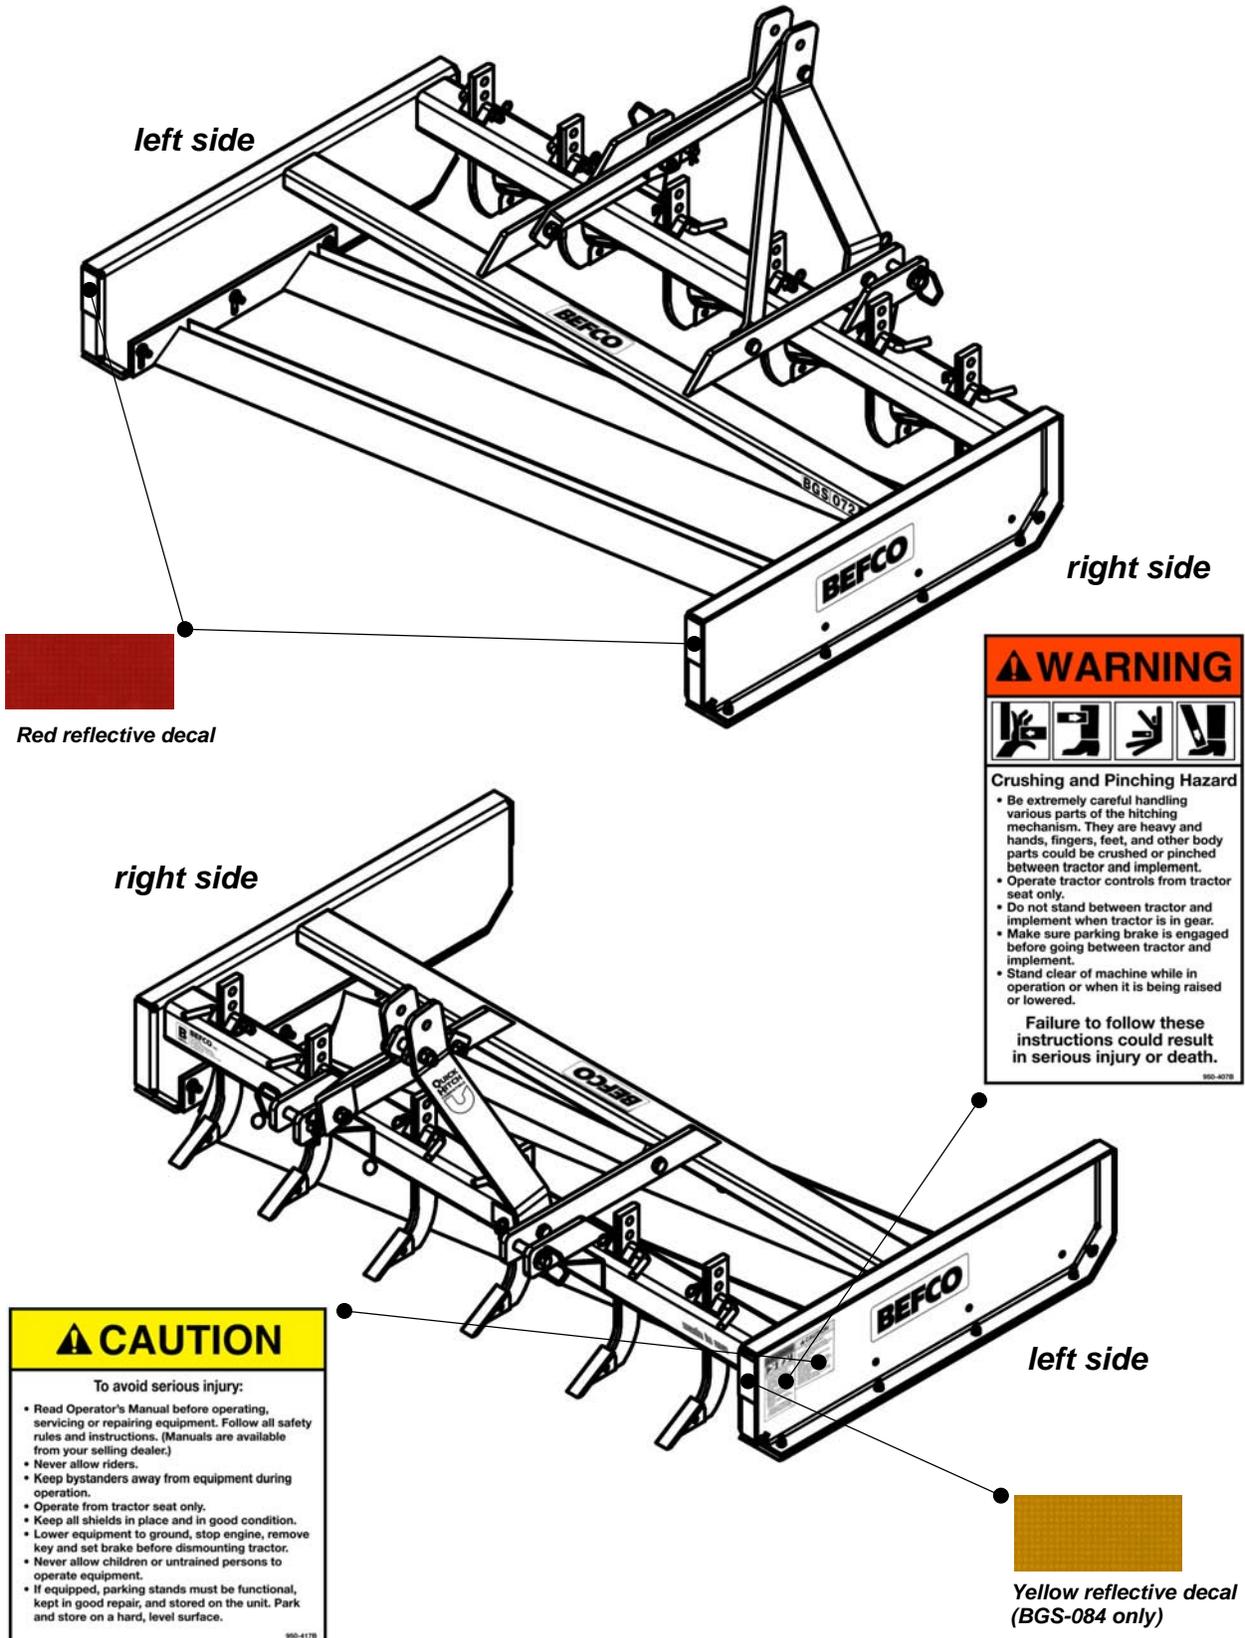

3 - OPERATION

You have purchased a grading scraper designed especially for leveling and grading applications for landscaping and maintenance operations with tractors ranging from 16 to 65 HP. While it can be used for a variety of duties it is an ideal machine for leveling farmland, construction sites and road projects. The BGS series grading scrapers are available in 48", 60", 72" and 84" working widths and are designed to be mounted on a category 1 three point hitch or to be used with a category 1 Quick Hitch system. All models are equipped with two bolt-on heat treated blades with reversible cutting edge and replaceable and reversible full length skid shoes bolted on the frame. Standard duty models are also equipped with adjustable or removable ripping shanks with replaceable tips. The grading blade carrier can be adjusted up to 1½" below the skid shoes. This feature will help control the desired level of blade penetration or may be used to lower the blades to ground level as the cutting edge wears out.

3.01 - Operational Safety



CAUTION: Our grading scrapers are designed considering safety as the most important aspect and are the safest available in today's market. Unfortunately, human carelessness can override the safety features built into our machines. Injury prevention and work safety, aside from the features on our grading scrapers, are very much due to the responsible use of the equipment. It must always be operated prudently following with great care, the safety instructions laid out in this manual.



1. The use of this equipment is subject to certain hazards which cannot be prevented by mechanical means or product design. All operators of this equipment must read and understand this entire manual, paying particular attention to safety and operating instructions, prior to using.
2. Do not operate the tractor and implement when you are tired, sick or when using medication.
3. Keep all helpers and bystanders at least several yards from the implement. Only properly trained people should operate this machine.
4. Accidents are most likely to occur with machines that are loaned or rented to someone who has not read the operator's manual and is not familiar with the implement.
5. Always stop the tractor, set brake, shut off the tractor engine, remove the ignition key, lower implement to the ground before dismounting tractor. Never leave equipment unattended with the tractor running.

6. Never place hands or feet under implement with tractor engine running or before you are sure all motion has stopped. Stay clear of all moving parts.
7. Do not reach or place yourself under equipment until it is blocked securely.
8. Do not allow riders on the implement or tractor at any time. There is no safe place for riders.
9. Before backing up, look behind carefully.
10. Never operate tractor and implement under trees with low hanging limbs. Operators can be knocked off the tractor and then run over by the implement.
11. The parts of this machine have been designed and tested for rugged use. However, they could fail upon impact with heavy, solid objects such as steel guard rails and concrete abutments. Such impact could cause the broken objects to be thrown outward at very high velocities. To reduce the possibility of property damage, serious injury, or even death, never allow the machine to contact such obstacles.
12. Frequently check shanks and cutting blades. They should be free of nicks and cracks and securely fastened.
13. Stop implement immediately upon striking an obstruction. Turn engine off, remove key, inspect and repair any damage before resuming operation.
14. Stay alert for holes, rocks and roots in the terrain and other hidden hazards. Keep away from drop-offs.
15. Use extreme care and maintain minimum ground speed when transporting on hillside, over rough ground and when operating close to ditches or fences. Be careful when turning sharp corners.
16. Before beginning operation, contact local utility companies to make certain there are no bundled gas lines, electrical cables, etc., in the work area.
17. Reduce speed on slopes and sharp turns to minimize tipping or loss of control. Be careful when changing directions on slopes. Do not start or stop suddenly on slopes. Avoid operation on steep slopes.
18. When using a unit, a minimum 20% of tractor and equipment weight must be on tractor front wheels. Without this weight, tractor could tip over, causing personal injury or death. The weight may be attained with a front end loader, front wheel weights, ballast in tires or front tractor weights. When attaining a minimum 20% of tractor and equipment weight on the front wheels, you must not exceed the ROPS weight certification. Weigh the tractor and equipment. Do not guess or estimate!
19. Inspect the entire machine periodically². Look for loose fasteners, worn or broken parts, and leaky or loose fittings.
20. Pass diagonally through sharp dips and avoid sharp drops to prevent "hanging up" tractor and implement.
21. Avoid sudden starts and stops while traveling up or downhill.
22. Always cut down slopes; never across the face. Avoid operation on steep slopes. Slow down on sharp turns and slopes to prevent tipping and/or loss of control.
23. Comply with all federal, state and local laws during transport on roads.


² See Chapter 4 - Maintenance.

3.02 - Setup

Notice to dealer: Pre-delivery setup and service including lubrication is the responsibility of the authorized dealer. It is up to him to assure that the machine is in perfect condition and ready to be used. It is his responsibility to ensure that the customer is aware of all safety aspects and operational procedures for the implement. He must also fill out the Pre-Delivery Checklist³ prior to delivering the implement.

3.03 - Assembly Instructions

For transportation purposes the three point hitch of the grading scraper is loosely assembled to the frame and folded down.

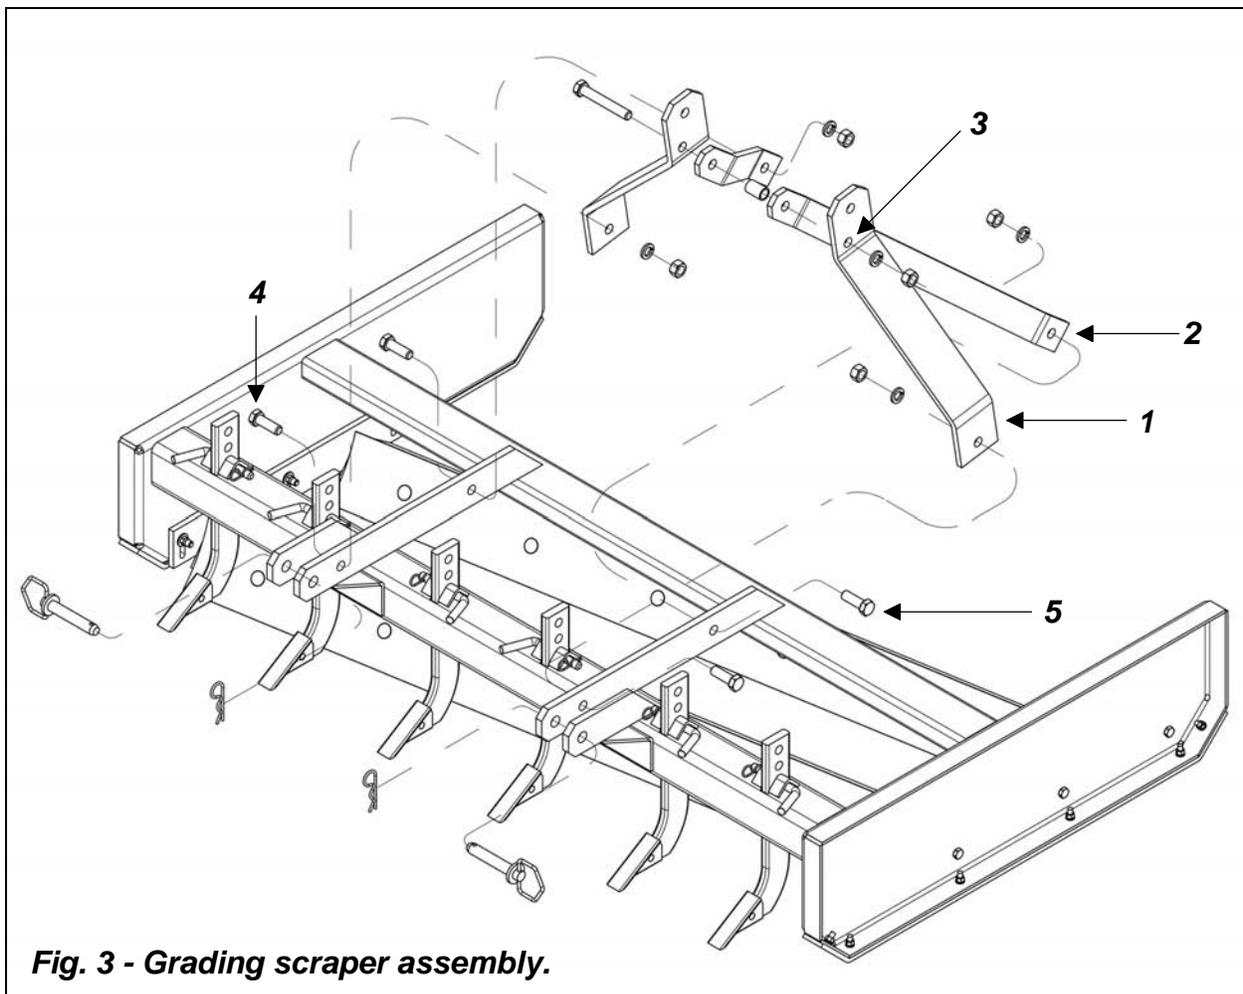

To assemble the three point hitch proceed as follows:

1. The bolts (see #4, fig. 3) or hitch pins (for the subcompact series) that secure the vertical supports (see #1, fig. 3) to the main frame of the machine are shipped mounted in the holes of the supports. Remove the bolts (or hitch pins) and nuts.

³ See Chapter 7 - Pre-Delivery Checklist.

2. Loosen the bolts (**see #5, fig. 3**) that attach the horizontal supports (**see #2, fig. 3**) to the main frame.
3. Raise the three point hitch and reinstall the bolts (or hitch pins) and nuts to the vertical supports.
4. **On standard duty series, before tightening down ensure that the lower hole on the vertical supports is offset towards the tractor (see #3, fig. 3).**
5. Tighten down all hardware.



CAUTION: Stand clear of bands when cutting as they could be under sufficient tension to cause them to fly loose. Take care in removing bands and wire. They often have extremely sharp edges and cut very easily.

3.04 - Pre-Operational Check

IMPORTANT: Check each of the following, carefully, prior to engaging the equipment:

1. No wrappings or foreign objects are around the implement.
2. The shanks and blades are properly installed and the bolts properly torqued⁴.
3. All hardware is tight.
4. No people or animals are in the work area.

3.05 - Attaching to the Tractor

Model BGS-C48 may be used on tractors up to 30 horsepower and a category 1 three point hitch or a category 1 Quick Hitch.

Models BGS-060, BGS-072 and BGS-084 may be used on tractors up to 65 horsepower and a category 1 three point hitch or a category 1 Quick Hitch⁵.



DANGER: Never allow anyone to stand between the implement and tractor during hookup operations.


To attach the grading scraper to the tractor proceed as follows (**see fig. 4**):

1. Back the tractor to the grading scraper until the draft links align with the hitch pins.
2. Stop engine, engage parking brakes and remove key before dismounting tractor.
3. Secure the draft links to the hitch pins and secure them in place with cotter pins.
4. Attach top link to the top hitch of the grading scraper using a top link pin (supplied by customer).
5. Adjust the tractor sway chains/bars to center the grading scraper behind the tractor and control the side sway.
6. Ensure the grading scraper is leveled by adjusting both the draft links and the top link.

⁴ Refer to Table 1 - Torque Specifications, page 19.

⁵ Refer to Table 2 - Technical Features, page 19.

Fig. 4 - Attaching to the tractor.

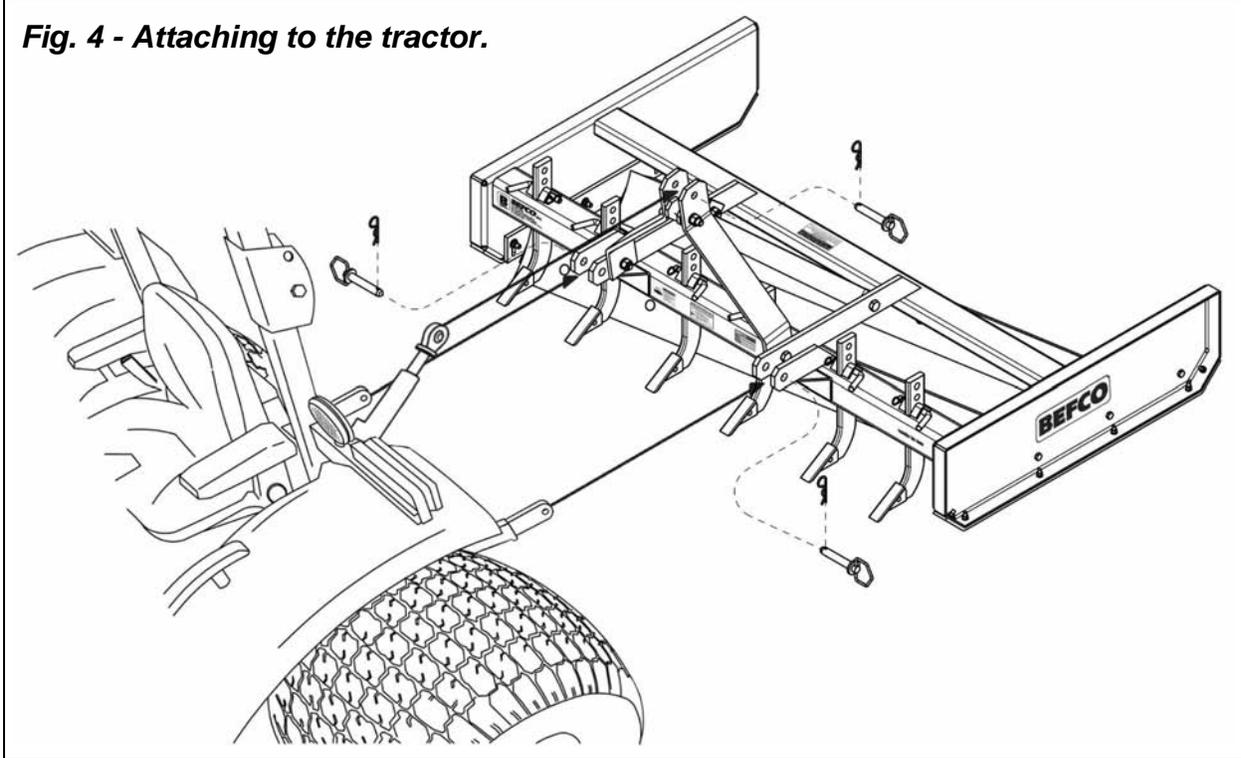

DANGER: Never attempt to attach the implement to the tractor or make any adjustments to it without first turning the tractor off.



DANGER: Failure to ensure a secure coupling of the implement to the tractor can cause injury and damage to the implement or tractor.

3.06 - Start Up



DANGER: Never allow anyone around the implement when it is in operation.



CAUTION: For emergency reasons, learn how to stop the tractor and implement quickly.

Before starting to work, never forget that the **operator is responsible** for the following:

1. Safe and correct driving of the tractor and implement.
2. To learn precise safe operating procedures for both the tractor and the implement.

3. To ensure all maintenance and lubrication has been performed on the implement.
4. To have read and understood all safety aspects for the implement in the operator's manual.
5. To have read and understood all safety decals on the implement.
6. To have contacted the local utility companies to make certain there are no bundled gas lines, electrical cables, etc., in the work area.
7. Checking the overall condition of the machine.
8. Checking to see if front weights need to be added to the tractor in order to maintain balance.
9. Checking the tractor tires for the proper pressure in accordance with the tractor operator's manual.
10. Making sure the proper attire is worn. Avoiding loose fitting clothing which can become entangled. Wearing sturdy, tough-soled work shoes and protective equipment for eyes, hands, ears and head. Never operate tractor or implements in bare feet, sandals or sneakers.
11. Checking area for stones, branches and other debris that might be thrown.
12. Ensuring proper lighting is available, sunlight or good artificial lighting.

3.07 - Working Speed

Ground speed is determined by the soil condition and tractor power. Simple experimentation will determine the best speed for the desired results, usually 2 to 5 mph.

Lower ground speed will enable better coverage of low spots and grading of high spots, while higher speeds will allow for a cleaner, smoother finish.

3.08 - Operating Techniques

The grading scraper should be operated level with the ground. This is obtained by properly adjusting the tractor's top and bottom links.

Blade carrier adjustment:

For a non-aggressive action the blade carrier should be positioned evenly with the bottom of the skid shoes allowing these to carry the weight of the implement.


When a more aggressive blade penetration is desired the grading blade carrier can be adjusted up to 1½" below the skid shoes (**see fig. 5**). This feature can also be used to lower the blades to ground level as the cutting edge wears out.

The height of the grading blade carrier can also be adjusted only on one side of the implement allowing to dome your roadway. In order to do this lower the right side of the blade carrier more than the left side and start operating on the far right side of the roadway and returning on the far left side of the roadway working your way towards the middle of the road.

To adjust blade carrier height proceed as follows:


1. Using the tractor's controls raise the grading scraper from the ground.
2. Stop engine, engage parking brakes and remove key before dismounting tractor.

3. Properly support the implement using blocks to support the side plates.
4. Without starting the tractor's engine, operate the controls to slowly lower the implement on the blocks.
5. Loosen the bolts on both sides of the blade carrier to the frame and re-tighten at the desired height.

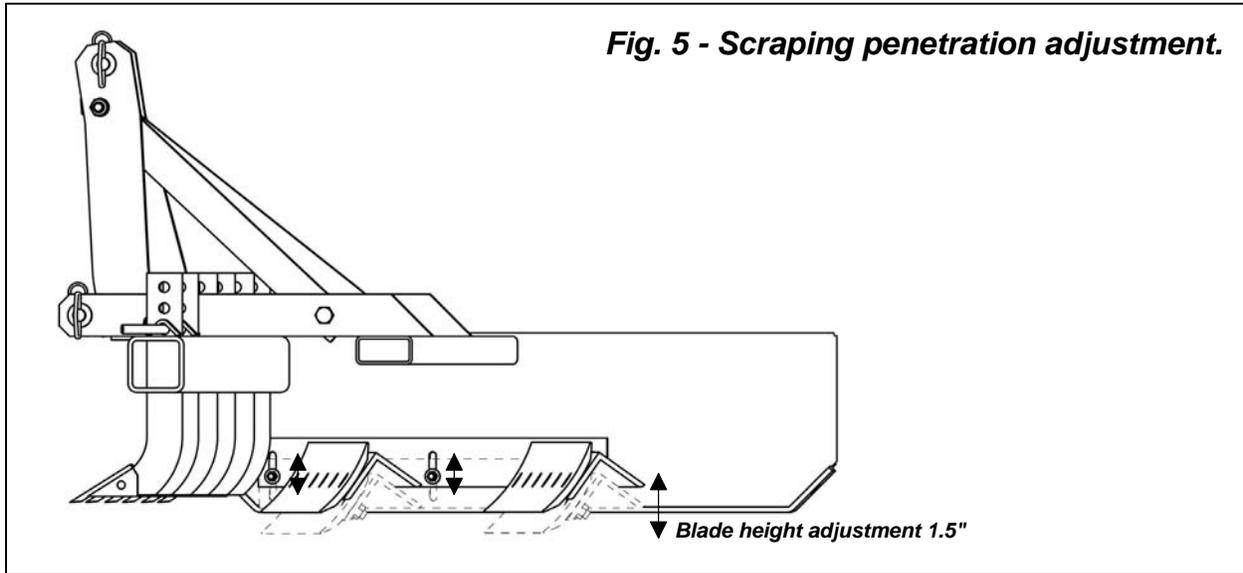

Scarifying adjustment:

Models BGS-060, BGS-072 and BGS-084 are equipped with scarifier shanks. The shanks' height can be adjusted in 3 different positions to accommodate for the desired level of ground penetration (see fig. 6). Lowering the shanks will provide a more aggressive ripping action and may help penetrate the ground in tough soil conditions. Ensure that the scarifier points are installed facing towards the tractor.

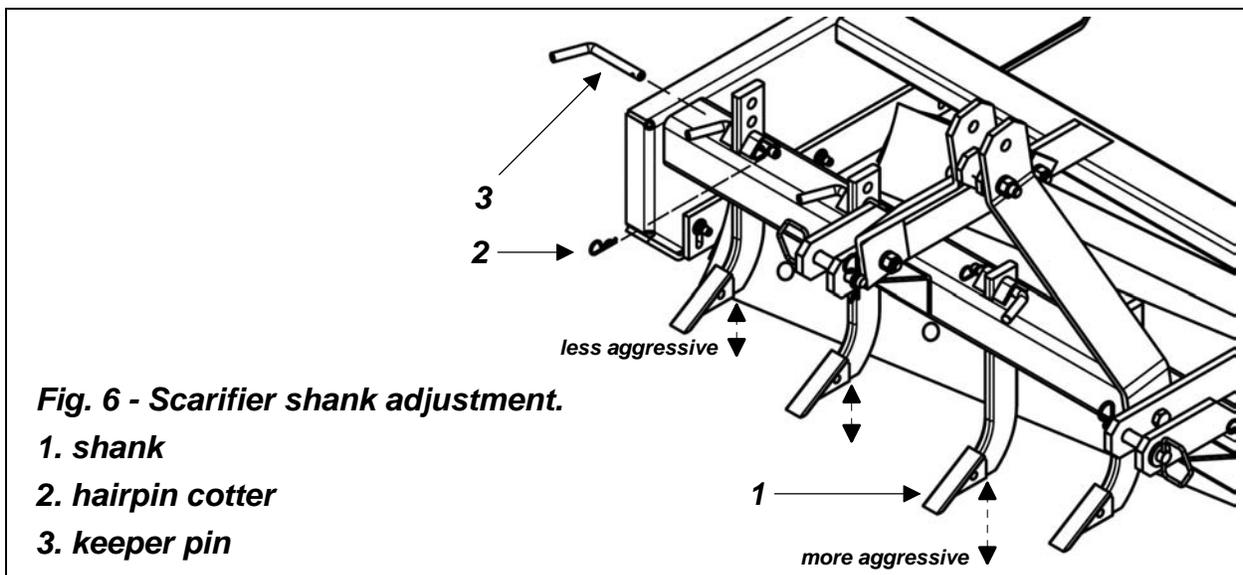

3.09 - Uneven Terrain



DANGER: Be careful of rollover when operating tractor and implement over uneven ground.

The following precautions should always be observed when working on uneven terrain:

1. In extremely uneven terrain rear wheel weights, front tractor weights, and/or tire ballast should be used to improve stability.
2. Observe the type of terrain and develop a safe working pattern.
3. Operate the implement up and down steep slopes, not across slopes, to prevent the tractor from tipping. Avoid sudden stops and starts, and slow down before changing directions on a slope.
4. Pass diagonally through sharp dips and avoid sharp drops to prevent hanging up the tractor and implement.
5. Slow down on sharp turns and slopes to prevent tipping or loss of control.
6. Watch for holes, roots or other hidden objects. Do not use near the edge of a gully, ditch or stream bank.

3.10 - Transport



CAUTION: Do not tow tractor and implement behind other vehicles. Use a properly equipped trailer with heavy tie-downs for towing operations.

Before transporting:

1. Always select a safe ground speed that is appropriate for the terrain.
2. Beware of traffic on public roads. Install a SMV (Slow Moving Vehicle) sign when traveling on roads or streets. Comply with all federal, state and local laws.
3. Reduce ground speed when turning and take care that the implement does not strike obstacles such as trees, fences or buildings.

4 - MAINTENANCE



DANGER: Stop engine, lock parking brake and remove key before performing any service or maintenance.

Never rely on the tractor lift system. Install blocks or stands under the implement to prevent it from falling.

Always use personal protection devices, such as glasses or gloves when performing maintenance.

Keep fingers out of slots to prevent injury.

4.01 - Maintenance Safety



1. Good maintenance is your responsibility.
2. Keep service area clean and dry. Be sure electrical outlets and tools are properly grounded. Use adequate light for the job at hand.
3. Make sure there is plenty of ventilation. Never operate the engine of the towing vehicle in a closed building. The exhaust fumes may cause asphyxiation.
4. Make no repair or adjustments with the tractor engine running. Before working on the machine, shut off the engine, set the brakes, and remove the ignition key.
5. Be certain all moving parts have come to a complete stop before attempting to perform maintenance.
6. Never work under equipment unless it is blocked securely.
7. Always use personal protection devices such as eye, hand and hearing protectors, when performing any service or maintenance.
8. Frequently check shanks. They should be free of nicks and cracks and securely fastened.
9. Periodically tighten all bolts, nuts and screws and check that all cotter pins are properly installed to ensure unit is in a safe condition.
10. After servicing, be sure all tools, parts and service equipment are removed.
11. Never replace hex bolts with less than grade five bolts unless otherwise specified, i.e. shear bolts⁶.
12. Where replacement parts are necessary for periodic maintenance and servicing, genuine replacement parts must be used to restore your equipment to original specifications. The company will not claim responsibility for use of unapproved parts and/or accessories and other damages as a result of their use.

⁶ Refer to Table 1 - Torque Specifications, page 19.

13. Unauthorized modifications to the machine may impair the function and/or safety of the machine and reduce its life. If equipment has been altered in any way from original design, the manufacturer does not accept any liability for injury or warranty.

4.02 - Service

Hourly or whenever an obstacle is hit:

1. Check machine condition, particularly the shanks and cutting blades.
2. Replace any damaged or worn shank, shank tip or blade.
3. Remove any wrapping (stalks, weeds, trash, etc.) from implement.

Every 25 hours:

Check hardware tightness; vibration can loosen bolts⁷.

⁷ See Table 1, page 19.

TABLE 1 - TORQUE SPECIFICATIONS

Metric (ISO) treaded bolts head marking							Inch (SAE) treaded bolts head marking								
	Class 5.8		Class 8.8		Class 10.9			Grade 2		Grade 5		Grade 8			
Bolt size mm	Thread mm	N.m	ft-lb	N.m	ft-lb	N.m	ft-lb	Bolt size inch	Thread inches tpi	N.m	ft-lb	N.m	ft-lb	N.m	ft-lb
M5	0.8	4	3	6	4	9	7	1/4"	20	7	5	11	8	16	12
M6	1	6	4	10	7	15	11	1/4"	28	8	6	13	10	19	14
M8	1.25	16	12	25	18	36	27	5/16"	18	15	11	24	17	33	25
M8	1	17	13	26	19	38	28	5/16"	24	17	13	26	19	37	27
M10	1.5	31	23	48	35	71	52	3/8"	16	27	20	42	31	59	44
M10	1.25	33	24	51	38	75	55	3/8"	24	31	23	47	35	67	49
M10	1	35	26	53	39	78	58	7/16"	14	43	32	67	49	95	70
M12	1.75	54	40	84	62	123	91	7/16"	20	48	36	75	55	106	78
M12	1.5	56	41	87	64	128	94	1/2"	13	66	48	102	75	144	106
M12	1.25	59	44	90	66	133	98	1/2"	20	75	55	115	85	163	120
M14	2	84	62	133	98	195	144	9/16"	12	95	70	147	109	208	154
M14	1.5	94	69	142	105	209	154	9/16"	18	106	79	164	121	232	171
M16	2	131	97	206	152	302	223	5/8"	11	132	97	203	150	287	212
M16	1.5	141	104	218	161	320	236	5/8"	18	149	110	230	170	325	240
M18	2.5	181	133	295	218	421	310	3/4"	10	233	172	361	266	509	376
M18	2	196	145	311	229	443	327	3/4"	16	261	192	403	297	569	420
M18	1.5	203	150	327	241	465	343	7/8"	9	226	167	582	430	822	606
M20	2.5	256	189	415	306	592	437	7/8"	14	249	184	642	473	906	668
M20	1.5	288	212	454	335	646	476	1"	8	339	250	873	644	1232	909
M22	2.5	344	254	567	418	807	595	1"	12	371	273	955	704	1348	995
M22	1.5	381	281	613	452	873	644	1-1/8"	7	480	354	1077	794	1746	1288
M24	3	444	327	714	526	1017	750	1-1/8"	12	539	397	1208	891	1958	1445
M24	2	488	360	769	567	1095	808	1-1/4"	7	677	500	1519	1120	2463	1817
M27	3	656	484	1050	774	1496	1103	1-1/4"	12	750	553	1682	1241	2728	2012
M27	2	719	530	1119	825	1594	1176	1-3/8"	6	888	655	1992	1469	3230	2382
M30	3.5	906	668	1420	1047	2033	1499	1-3/8"	12	1011	746	2268	1673	3677	2712
M30	2	1000	738	1600	1180	2250	1659	1-1/2"	6	1179	869	2643	1949	4286	3161
M36	4	1534	1131	2482	1830	3535	2607	1-1/2"	12	1326	978	2974	2194	4823	3557

When using lock washers with nuts, increase torque values by 5%.

TABLE 2 - GRADING SCRAPERS - TECHNICAL FEATURES

Subcompact series, for tractors up to 30 HP, 3 point hitch cat. 1.							
Model	HP	Working width	Overall width	Weight lb.	# Shanks	Side panel height	Grading blade adjustment
BGS-C48	16-30	48"	52"	350	-	10 3/4"	0" to 1 1/2"
Standard duty series, for tractors up to 65 HP, 3 point hitch cat. 1.							
Model	HP	Working width	Overall width	Weight lb.	# Shanks	Side panel height	Grading blade adjustment
BGS-060	25-65	60"	64"	592	5	12 1/2"	0" to 1 1/2"
BGS-072	25-65	72"	76"	703	6	12 1/2"	0" to 1 1/2"
BGS-084	25-65	84"	89"	764	7	12 1/2"	0" to 1 1/2"

5 - REPAIR PROCEDURES



CAUTION: All repair procedures must be done by authorized dealerships. It is not recommended that untrained individuals perform any repair work. The following operations are detailed for qualified personnel only. Never work under the implement without properly blocking the unit.

5.01 - Shanks and Shank Tips Replacement



CAUTION: Always keep feet away from under the shanks. It is possible that they could slip and fall causing injury.

To remove or adjust operating height of the shanks proceed as follows (**see fig. 6**):


1. Properly support the implement using blocks to support the side plates.
2. Pull the hairpin cotter from shank keeper pin, hold shank to prevent it from falling and remove keeper pin.
3. Adjust or remove shank and reinstall keeper pin and hairpin cotter.

Shank tips can be replaced by (**see fig. 7**):

1. Driving off worn tip with a hammer and a chisel.
2. Installing the replacement tip by using a hammer and a punch to bend the locking tab into the retaining hole on both sides of the shank.

Fig. 7 - Shank tip replacement.

1. shank
2. shank tip
3. locking tab

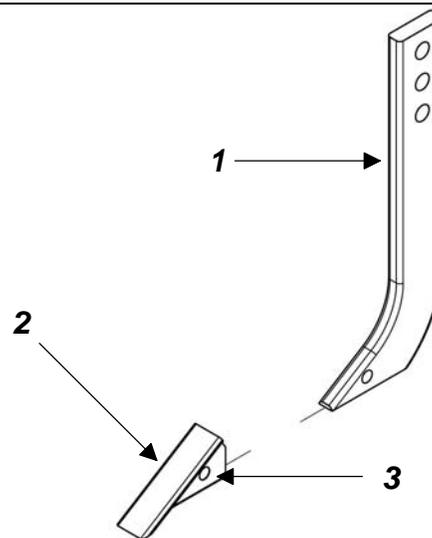


5.02 - Scraper Blade Replacement

Our scraper blades are interchangeable and reversible, they may be rotated to give a fresh cutting edge.

To remove the blades proceed as follows (see fig. 8):

1. Properly support the implement using blocks to support the side plates.
2. Remove the nuts from the plow bolts and turn the blade over.
3. Inspect nuts and bolts and replace them with 5/8"x1.75" G5 plow bolts if necessary.
4. Reinstall the blade and properly torque the nuts to 150 ft. lb.

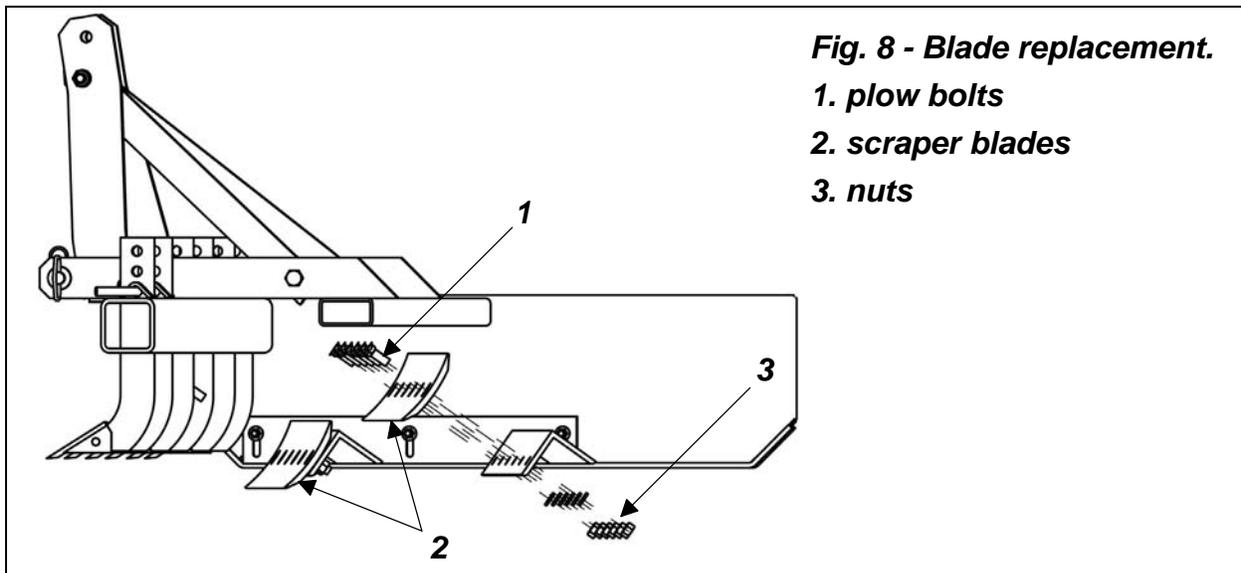

CAUTION: Scraper blades are heavy and you may require assistance to remove and install them.

5.03 - Skid Shoe Replacement

The grading scraper has replaceable and reversible full length skid shoes bolted on the frame. The skid shoes are reversible and therefore can be rotated if one end is wearing faster than the other end, this will help prolong their life.

To replace or reverse the skid shoes proceed as follows (see fig. 9):

1. Properly support the grading scraper with blocks.
2. Remove nuts, lock washers, bolts and skid shoe.
3. Inspect all hardware and check for wear, replace if necessary.
4. Reverse skid shoes or install new ones.
5. Properly torque all hardware.

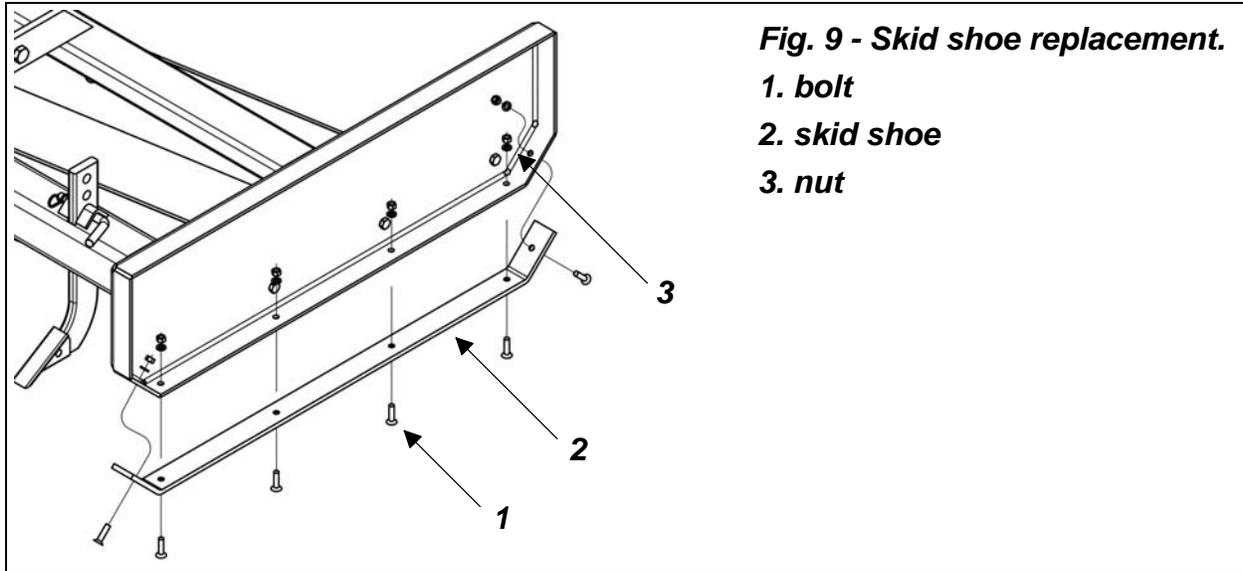


Fig. 9 - Skid shoe replacement.
 1. bolt
 2. skid shoe
 3. nut

5.04 - Suggested Spare Parts

It is suggested that the following spare parts be kept on hand for the implement at all times to prevent a minor problem from delaying work.

Description	Quantity
Shanks (if equipped)	1 set
Shank tips	8

5.05 - Storage

After seasonal use it is important to perform the following for prolonged storage:

1. Wash the implement carefully.
2. Inspect the implement and replace worn or damaged parts.
3. Tighten all hardware⁸.
4. Touch up scratches by sanding the area and applying a light coat of primer and paint to prevent rust from forming.
5. Cover the implement from the elements in order to have it in perfect condition for the start of the next season.



WARNING: Be sure to store the implement on a hard level surface and away from people especially children.

⁸ See Table 1, page 19.

6 - TROUBLESHOOTING



WARNING: Be sure tractor engine is off, parking brake is locked, and key is removed before making any adjustments.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Shanks won't penetrate ground surface.	Shank height not adjusted properly. Soil condition is extremely packed. Grading scraper not leveled. Shank tips may be worn.	Lower shanks to increase ground penetration. Shorten tractor's top link to increase scarifier tip penetration. Level frame from front to back and side to side. Replace tips or shanks.
Scraper blade won't penetrate the ground surface.	Tractor's top link not adjusted properly. Blade carrier too high, not allowing blades to touch the surface. Cutting blade worn out.	Lengthen tractor's top link to increase blade penetration. Lower grading blade carrier to increase blade penetration. Rotate or replace scraper blade.

7 - PRE-DELIVERY CHECKLIST

To the dealer: Inspect the machine thoroughly after assembly to assure it is functioning properly before delivering it to the customer. The following checklist is a reminder of points to cover. Check off each item as it is found satisfactory or after proper adjustment is made.

- Guards and shield properly fastened.
- Lubrication of grease fittings.
- All hardware properly tightened.
- All decals properly located and readable (**see fig. 2**).
- Blades properly installed, bolts and nuts tightened.
- Overall condition (touch up scratches, clean and polish).
- Test run, check for excessive vibration or overheating of bearings.
- Operator's Manual.

Review the Operator's Manual with the customer. Explain the following:

- Warranty.
- Safe operation and service.
- Correct machine installation and operation.
- Daily and periodic lubrication, maintenance and inspections.
- Troubleshooting.
- Operational procedures and storage.
- Parts and service.
- Fill out the Pre-Delivery Checklist and Warranty Registration form.
- Give customer the Operator's Manual and encourage the customer to read the manual carefully.

IMPORTANT: Warranty is not valid unless Pre-Delivery Checklist and Warranty Registration form in Operator's Manual is completed in detail and mailed to the Company.

Model Number: _____

Serial Number: _____

Delivery Date: _____

Dealer's Signature: _____

8 - WARRANTY

BEFCO's responsibility will be limited to substitution of the acknowledged defective merchandise to the same place of delivery as the previous one was supplied.

1. LIMITED WARRANTY

BEFCO, Inc. herein referred to as the Company, warrants its machines and related accessories, hereafter referred to as the Machine, to be free from defects in material and workmanship, for a period of twelve (12) months from the date of invoice to the first registered owner; this limited warranty does not apply to common wear items and excludes belts, shear pins, oil, grease, tires, tubes, hydraulic hoses, knives and PTO shafts.

Labor will be reimbursed at \$40.00 per hour based on BEFCO's time schedule.

Cost of transport to the servicing dealer is the responsibility of the customer.

Warranty coverage shall not be transferable from the first owner to any subsequent owner.

2. DISCLAIMER OF ALL OTHER WARRANTIES AND REMEDIES

Neither the Company nor any company affiliated with the Company makes any warranties, representations or promises, expressed or implied, as to the quality, performance or application of its products other than those set forth herein and does not make any implied warranty of merchantability or fitness.

The only remedies the purchaser has in connection with the breach, or performance of any warranty on the Company's Machine are those set forth herein. In no event will the dealer, the Company, or any company affiliated with the Company, be liable for:

- a. Injuries or damages of any kind or nature, direct, consequential or contingent to person or property.
- b. Any expenses incurred by the owner to repair, replace or rework any allegedly defective item.
- c. Any loss, cost, forfeiture or damages (including loss of profits; loss of crops; loss because of delay in field operations; any expenses or loss incurred for labor, supplies, substitute machine rental; liabilities of the owner to its customers or third persons; and all other consequential damages, losses, liabilities or damages for any other reasons) whether direct or indirect, and whether or not resulting from or contributed to by the default or negligence of the Company, its agents, employees and subcontractors which might be claimed as a result of the use or failure of the equipment delivered.

The Company's liability based on this limited warranty or any other applicable laws shall be limited to replacement or refund of the purchase price of the product.

The limited warranty extended herein gives you specific rights and you may also have other rights which vary from state to state. Neither the dealer nor the Company personnel has the authority to make any representation or to modify the terms and limitations of this warranty in any way.

Other than the limited warranty extended hereby there is no other expressed warranty in connection with the design, safety or use of any of the Company's products except as to title. All implied warranties are expressly disclaimed pursuant to the terms of this warranty.

3. CUSTOM WORK

If the Machine is used for commercial purposes such as custom work, the period warranted for the Machine is limited to six (6) months from the date of delivery to the first registered owner and does not cover any labor charges incurred.

4. RENTAL

If the Machine is used for rental purposes the period warranted for the Machine is limited to thirty (30) days from the date of delivery to the first registered owner and does not cover any labor charges incurred.

5. REGISTRATION

In order to qualify for coverage on this limited warranty, the product and name of the original purchaser must be registered with the Company by a completed Machine Pre-Delivery Checklist and Warranty Registration along with a copy of the dealer's invoice to the first registered owner to the Company within fourteen (14) days after the date of delivery to the original purchaser.

6. WARRANTY SERVICE

Warranty Service must be performed by a dealer authorized by BEFCO. If the warranty service requested is approved, the owner shall pay only for labor beyond the rate allowed, for overtime labor, and for any mileage charge for transporting the equipment to and from the dealer's shop. It is assumed that the dealer has the appropriate general and special tools to service the machine. Time required for replacement of knives, oil, grease and to remove excessive dirt from the Machine is not subject to reimbursement by the Company. The owner is required to clean the Machine before presenting it to the dealer for service work. The Machine must be delivered within thirty (30) days after failure date by the owner to the dealer to be eligible for warranty consideration.

7. UNAPPROVED SERVICE OR MODIFICATION

All obligations of the Company under this limited warranty shall be terminated if:

- a. Proper service and operation instructions as outlined in the Operator's Manual and on the instruction sticker on the Machine, are not followed.
- b. The Machine is modified or altered in any way not approved by the Company.
- c. The Company does not receive a copy of the dealer's invoice to the first registered owner within fourteen (14) days from the date of delivery.
- d. The Company has not been paid in full, by the dealer, for the Machine.

8. ACCIDENTS AND NORMAL MAINTENANCE

This limited warranty covers defective material and workmanship. It does not cover depreciation or damage caused by normal wear, accidents, improper maintenance, improper protection or improper use. The costs of normal maintenance or repairs for accidents or improper use, and related labor will be borne by the owner.

9. REPLACEMENT PARTS

BEFCO, Inc. warrants replacement parts to be free from defect in material and workmanship for a period of thirty (30) days from the date of delivery to the original purchaser.

WARRANTY REGISTRATION

BEFCO, Inc.
P.O. Box 6036
Rocky Mount, NC 27802-6036

Tel: (252) 977.9920 - Fax: (252) 977.9718

Dealer _____ Acct. # _____	Retail Customer _____
Street _____ Country _____	Street _____
Town _____ State _____ Zip _____	Town _____ State _____ Zip _____
Date of delivery _____ Invoice # _____	Phone _____
Model # _____ Serial # _____	
<p>Pre-Delivery Checklist:</p> <p><input type="checkbox"/> Greased fittings.</p> <p><input type="checkbox"/> Safety guards in place.</p> <p><input type="checkbox"/> All hardware tight.</p> <p><input type="checkbox"/> Bolts torqued correctly.</p> <p><input type="checkbox"/> Attached unit to tractor. Yes/No.</p> <p><input type="checkbox"/> Field adjusted. Yes/No.</p> <p><input type="checkbox"/> Test run. Dry/Infield.</p> <p><input type="checkbox"/> Safety decals.</p> <p><input type="checkbox"/> Operator's Manual.</p> <p>The machine described above, had been prepared for delivery according to the Pre-Delivery Checklist and the Customer has been instructed in its care and operation and the condition of warranty.</p>	<p>Tractor make: _____</p> <p>Model: _____; HP _____</p> <p>Type of operation: Private homeowner, Landscaping, Commercial maintenance, Golf Course, Municipality, Turf Farm, others: _____</p> <p>Approximate number of acres machine will be used on annually: _____</p> <p>I hereby acknowledge that: I have received and accepted delivery of the machine described. The equipment was checked thoroughly for loose or missing parts and has been adjusted in accordance with the Pre-Delivery Checklist. I have read and understand the nature and extent of the warranty and understand clearly that there were and are no other representations of warranties either expressed or implied, made by anyone. I have been advised on proper operation, maintenance and lubrication procedure of this equipment. I have been instructed on and do understand the application, limitation and capacities this equipment was designed and recommended for, all as described in the Operator's Manual and literature published by the Company.</p>
Inspected by: _____	
Date: _____	Date: _____
Dealer's Signature: _____	Customer's Signature: _____

This registration along with a copy of the invoice must be sent to BEFCO, Inc. within 14 days of date of purchase.

Sender:

Fold here

*Place stamp
here*

BEFCO, Inc.

Warranty Department

P.O. Box 6036

Rocky Mount, NC 27802-6036

Cut along this line



BEFCO[®]


Parts Manual

GROUND ENGAGE EQUIPMENT



Grading Scrapers

BGS-C48


BGS-060, BGS-072, BGS-084

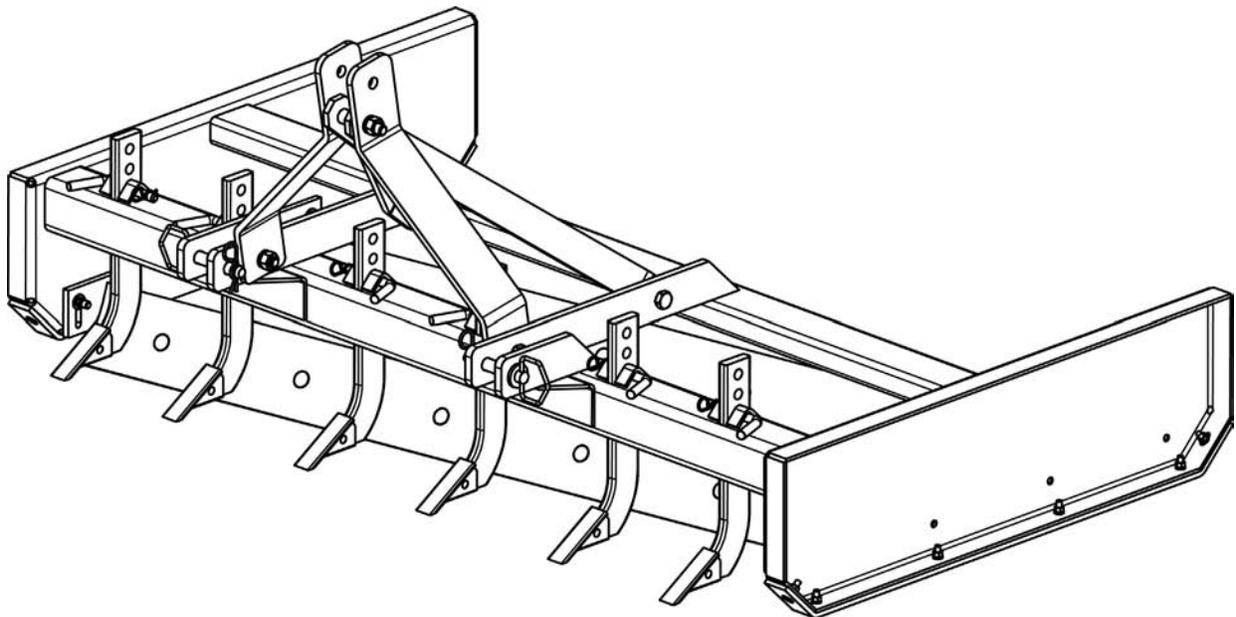



Ref.	Part #	Description	Qty.
1	7900040	Frame, grading scraper 48"	1
2	503-974B	Horizontal support, subcompact 48"	2
3	503-935B	Vertical support, subcompact 48"	2
4	7900012	Skid shoe	2
5	006-9016	Spacer, inner	1
6	943-008B	Hitch pin 7/8"x2.00"	2
7	056-9019	Scraper blade 48"	2
8	006-9611	Bolt HH 3/4"-10x1.75" G5 Z F	2
9	006-9027	Nut HH 3/4"-10 G2 Z	3
10	006-9614	Washer lock 3/4" Z	3
11	503-999B	Bolt HH 7/16"-14x1.25" G5 Z F	6
12	110-1221	Washer flat 7/16" USS Z	6
13	503-651B	Bolt PB 5/8"-11x1.75" G5 Z	8
14	502-866B	Washer lock 5/8" Z	8
15	502-865B	Nut HH 5/8"-11 G2 Z	8
16	006-9612	Bolt HH 3/4"-10x4.50" G5 Z P	1
17	7900041	Blade holder 48"	1
18	503-998B	Bolt CS 3/8"-16x1.25" G5 Z F	12
19	006-9620	Nut HH 3/8"-16 G2 Z	12
20	006-9629	Washer lock 3/8" Z	12
21	502-860B	Nut HH 7/8"-14 G2 Z	2
22	504-000B	Nut PT 7/16"-14 G2 Z	6
23	502-859B	Washer lock 7/8" Z	2

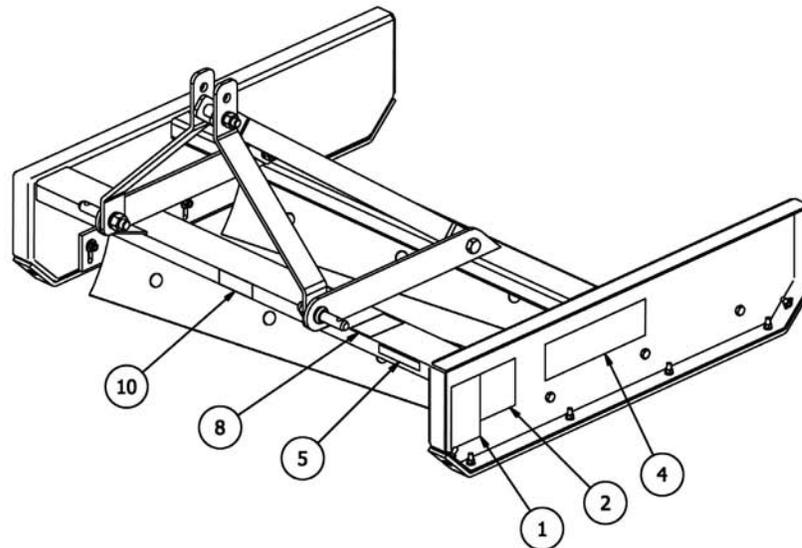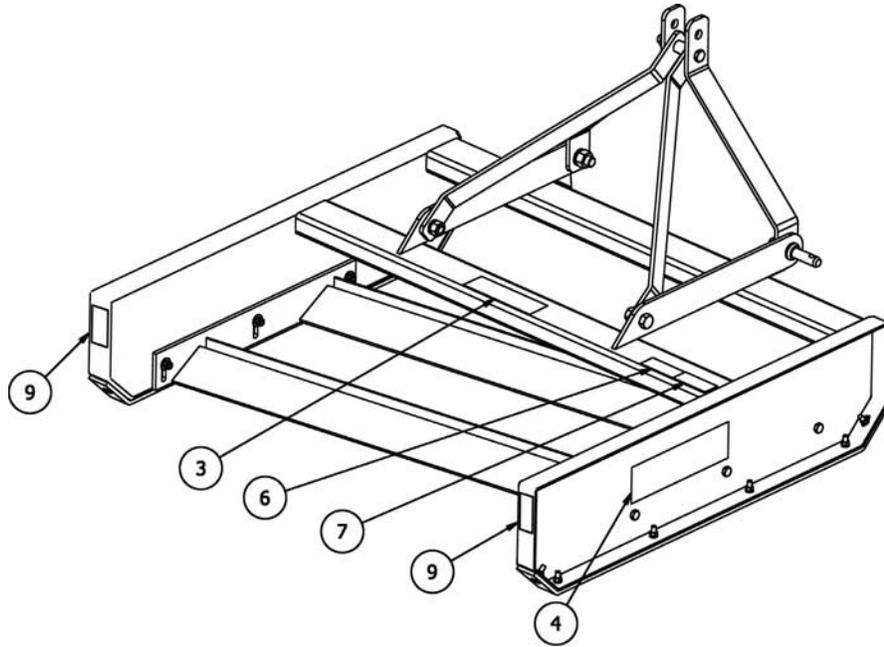

Ref.	Part #	Description	Qty.
1	950-407B	Decal "WARNING - Crushing and pinching hazard"	1
2	950-417B	Decal "CAUTION - Read operator's manual"	1
3	950-106B	Decal "BEFCO" small	1
4	950-107B	Decal "BEFCO" medium	2
5	950-358B	Decal "Made in USA"	1
6	950-471B	Decal "BGS"	1
7	950-950B	Decal "C48"	1
8	950-940B	Decal "Quick Hitch Compatible"	1
9	950-366B	Decal, red reflective	2
10	---	Decal, serial number	1
	971-398B	Operator's & Parts Manual BGS-C48, 060, 072, 084	1

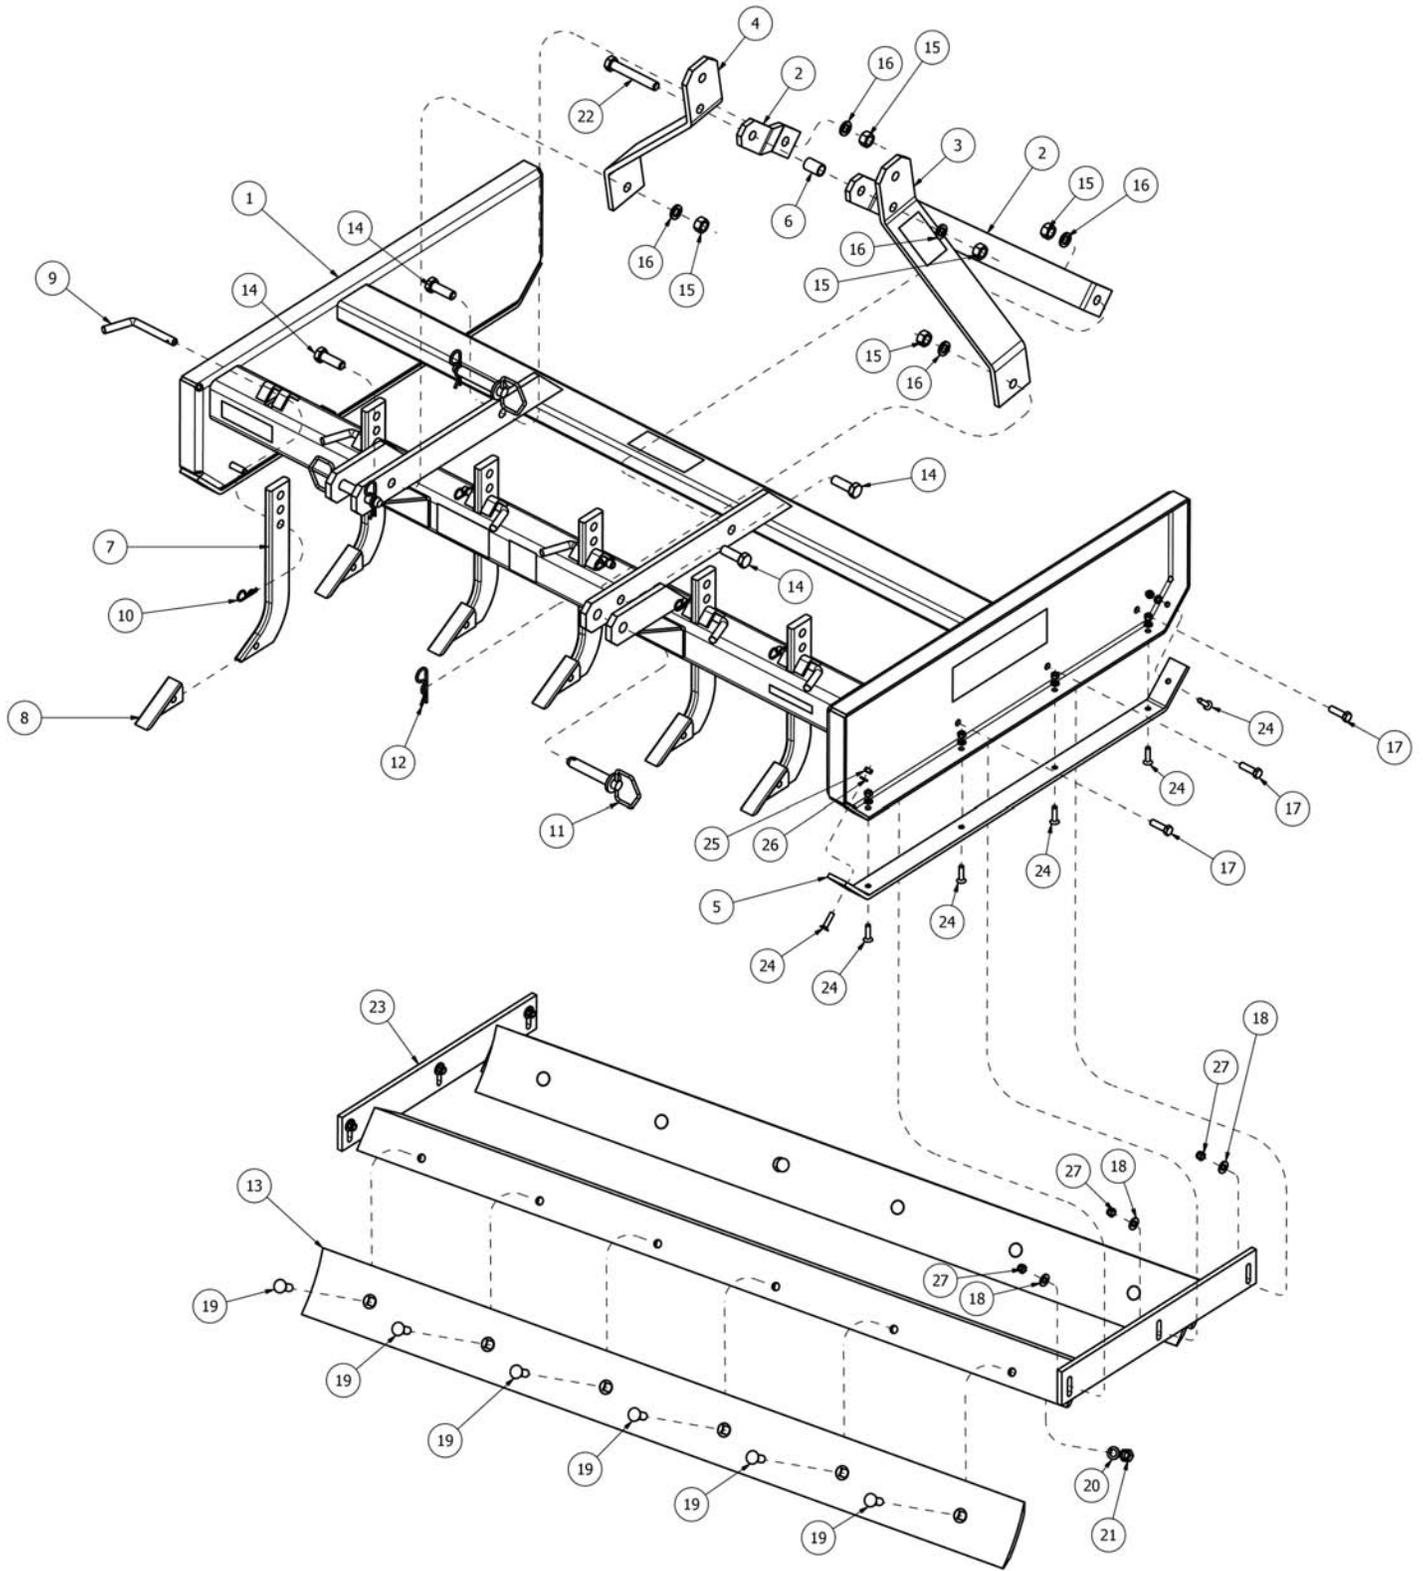

Ref.	Part #	Description	Qty.
1	7900010	Frame, grading scraper 60"; BGS-060	1
	7900020	Frame, grading scraper 72"; BGS-072	1
	7900030	Frame, grading scraper 84"; BGS-084	1
2	006-9014	Horizontal support	2
3	006-9033	Vertical support, left	1
4	006-9034	Vertical support, right	1
5	7900012	Skid shoe; BGS-060, 072	2
	7900032	Skid shoe; BGS-084	2
6	006-9016	Spacer, inner	1
7	006-9017	Scarifier shank; BGS-060	5
	006-9017	Scarifier shank; BGS-072	6
	006-9017	Scarifier shank; BGS-084	7
8	006-9026	Scarifier tip	-
9	503-639B	Bent pin 5/8"x4"; BGS-060	5
	503-639B	Bent pin 5/8"x4"; BGS-072	6
	503-639B	Bent pin 5/8"x4"; BGS-084	7
10	001-5240	Hairpin cotter Ø3 Z; BGS-060	5
	001-5240	Hairpin cotter Ø3 Z; BGS-072	6
	001-5240	Hairpin cotter Ø3 Z; BGS-084	7
11	006-9023	Hitch pin; #338262 & below	2
	001-6155	Hitch pin Ø22x100 Z; #338263 & above	2
12	009-1507	Hairpin cotter Ø4; #338262 & below	2
	001-8266	Lynch pin Ø11x45 Z; #338263 & above	2
13	016-9019	Scraper blade 60"; BGS-060	2
	036-9019	Scraper blade 72"; BGS-072	2
	046-9019	Scraper blade 84"; BGS-084	2
14	006-9613	Bolt HH 3/4"-10x2.25" G5 Z	4
15	006-9027	Nut HH 3/4"-10 G2 Z	5
16	006-9614	Washer lock 3/4" Z	5
17	503-999B	Bolt HH 7/16"-14x1.25" G5 Z F	6
18	110-1221	Washer flat 7/16" Z	6
19	503-651B	Bolt PB 5/8"-11x1.75" G5 Z; BGS-060	10
	503-651B	Bolt PB 5/8"-11x1.75" G5 Z; BGS-072	12
	503-651B	Bolt PB 5/8"-11x1.75" G5 Z; BGS-084	14
20	502-866B	Washer lock 5/8" Z; BGS-060	10
	502-866B	Washer lock 5/8" Z; BGS-072	12
	502-866B	Washer lock 5/8" Z; BGS-084	14
21	502-865B	Nut HH 5/8"-11 G2 Z; BGS-060	10
	502-865B	Nut HH 5/8"-11 G2 Z; BGS-072	12
	502-865B	Nut HH 5/8"-11 G2 Z; BGS-084	14
22	006-9021	Bolt HH 3/4"-10x5.00" G5 Z	1
23	7900011	Blade holder 60"; BGS-060	1
	7900021	Blade holder 72"; BGS-072	1
	7900031	Blade holder 84"; BGS-084	1
24	503-998B	Bolt CS 3/8"-16x1.25" G5 Z F; BGS-060, 072	12
	503-998B	Bolt CS 3/8"-16x1.25" G5 Z F; BGS-084	14
25	006-9620	Nut HH 3/8"-16 G2 Z; BGS-060, 072	12
	006-9620	Nut HH 3/8"-16 G2 Z; BGS-084	14
26	006-9629	Washer lock 3/8" Z; BGS-060, 072	12
	006-9629	Washer lock 3/8" Z; BGS-084	14
27	504-000B	Nut PT 7/16"-14 G2 Z	6

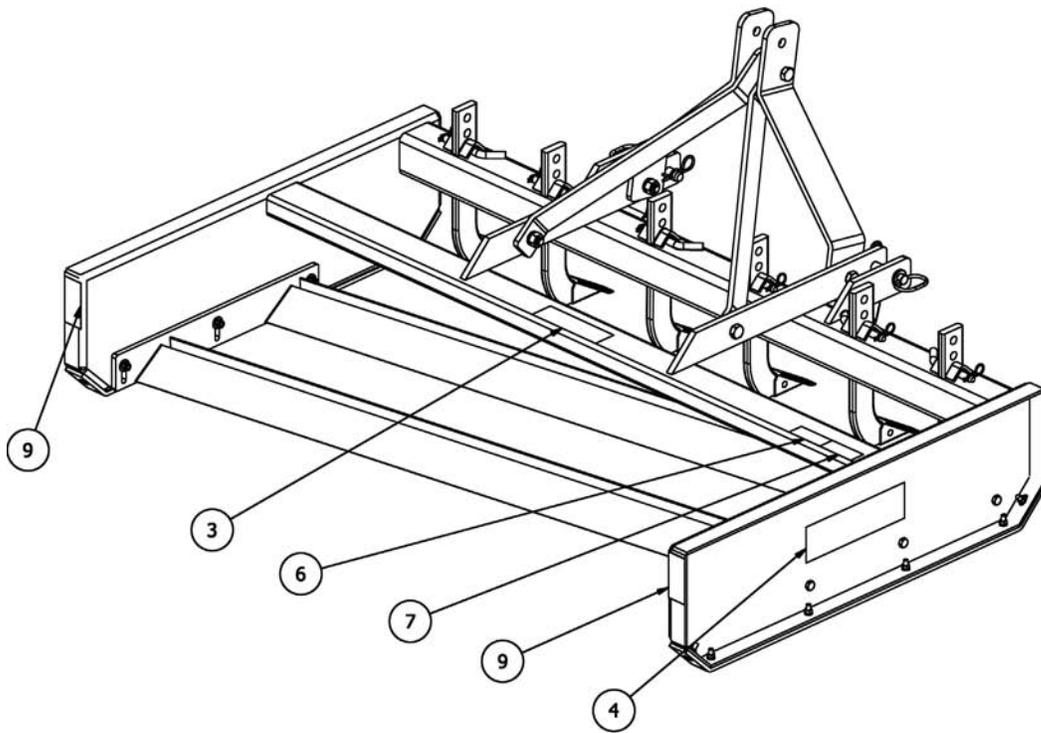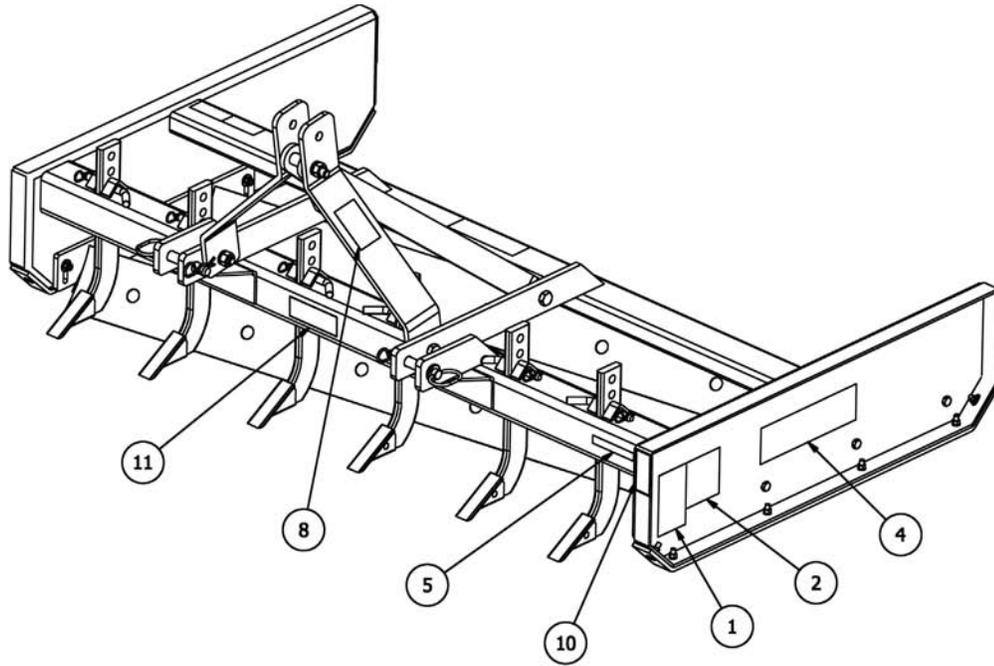

Ref.	Part #	Description	Qty.
1	950-407B	Decal "WARNING - Crushing and pinching hazard"	1
2	950-417B	Decal "CAUTION - Read operator's manual"	1
3	950-106B	Decal "BEFCO" small	1
4	950-107B	Decal "BEFCO" medium	2
5	950-358B	Decal "Made in USA"	1
6	950-471B	Decal "BGS"	1
7	950-284B	Decal "060"	1
	950-285B	Decal "072"	1
	950-304B	Decal "084"	1
8	950-940B	Decal "Quick Hitch Compatible"	1
9	950-366B	Decal, red reflective	2
10	950-405B	Decal, yellow reflective; BGS-084	1
11	---	Decal, serial number	1
	971-398B	Operator's & Parts Manual BGS-C48, 060, 072, 084	1

Use only original spare parts

All rights reserved. It is unlawful to copy, reprint or use any of the information or details in this manual without the expressed written permission of the Company. Technical information provided in this manual is approximate, the Company reserves the right to modify or improve the models shown for technical or commercial purposes. Pictures in this manual do not necessarily show the machine as delivered.

BEFCO[®]

P.O. Box 6036
Rocky Mount, NC 27802-6036
Tel.: 252.977.9920 - Fax: 252.977.9718
www.befco.com

